 
 


USER MANUAL

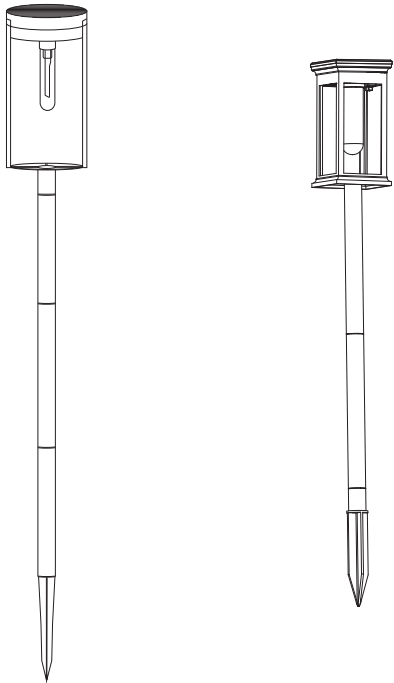

Structure

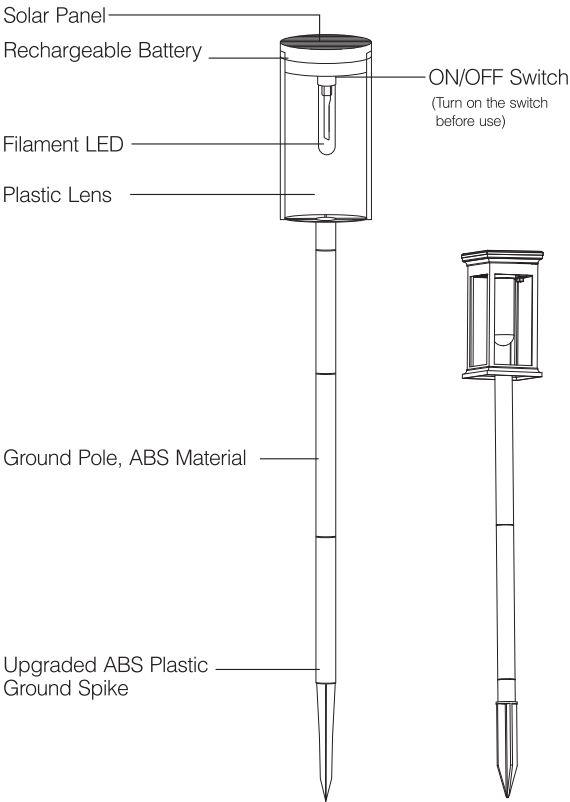


Instructions


1. Gently pull out the roof.



2. Turn ON the switch.

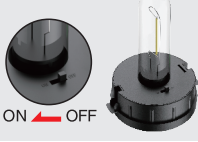

3. Expose panel to full sun for 6-8 hours.

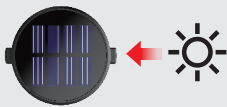

4. Cover panel to check it works right.



5. Install the roof back.



6. Connect the pole.



7. Insert the spike into the ground.



IP54

Warm Tip

1. Pick suitable location with direct sunlight, avoid placing lights under trees or under roof coverings.
2. When installing your solar light, please use a screw driver to drill a pilot hole or try to soften the hard ground with water. This will help prevent the ground stakes from breaking.
3. When installing your solar light use both hands. Place one at the base of the pole and one at the top of the pole.
4. It is best to keep solar lights away from shady areas as lack of sunlight will diminish the amount of charged battery power capacity. This will also cut the amount of time the solar lights stay on.
5. The charging time and the lighting time of the outdoor solar lights vary with sunlight intensity, geographical location, weather conditions, seasons, and other conditions.

Troubleshooting

• Short working time at night

1. The battery is not fully charged. Install the solar light in an area where it can receive the maximum amount of full, direct sunlight.
2. The battery is worn out. Please replace the old batteries with the fresh ones.
3. You're going through a period of cloudy days and gloomy weather.