



UFO LED HIGHBAY (LIGHTING)

lightingaddress.com

HABDO
LIGHTING

CE ROHS SASO CB IP65

AREAS OF APPLICATION



Shopping Center



Commercial




Educational Center




SPECIFICATIONS

WATT	LM\W	VOLTAGE	CCT	CRI	IP RATE	B.ANGLE	SPD	COVER	MATERIALS	TIME LIFE
50W	110\W	AC 100-240v	3000K 5000K	80	IP65	110°	4Kv	FROSTED GLASS	ALUMINUM	50,000H
100W	110\W	AC 100-240v	3000K 5000K	80	IP65	110°	6Kv	FROSTED GLASS	ALUMINUM	50,000H
200W	110\W	AC 100-240v	3000K 5000K	80	IP65	110°	6Kv	FROSTED GLASS	ALUMINUM	50,000H


DIMENSIONS

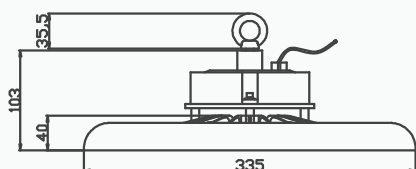

200W

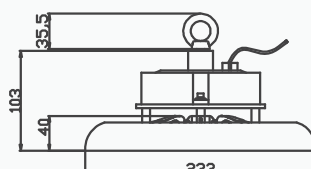

100W

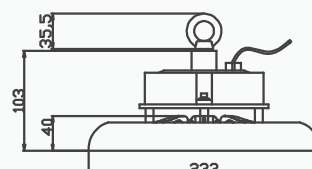

50W



SPECIFICATIONS

Code NO.	Power	Lm/W	Voltage	CCT	Beam Angle
1100830	50W	110	AC100-240V	3000K	110°
1100831	50W	110	AC100-240V	5000K	110°
1100832	100W	110	AC100-240V	3000K	110°
1100833	100W	110	AC100-240V	5000K	110°
1100834	200W	110	AC100-240V	3000K	110°
1100835	200W	110	AC100-240V	5000K	110°

PRECAUTION

دليل التشغيل


1. Read the entire manual carefully before installation and operation
2. The warranty period is listed on the product and the packaging. The product can be replaced if it fails or becomes defective during normal use within the prescribed warranty period.
3. Installation must be performed by a licenced and qualified electrician.
4. Do not change or tamper with any internal electric circuits or wiring, connectors or cables for any reasons.
5. Do not insert foreign objects into the product. This may result in electric shock, malfunction or damage to the products.
6. When in operation the luminaire temperature may reach up to 60°C.
7. Instant restart is allowed
8. The warranty shall exclude modifications to the product, incorrect installation and use outside of the intended scope.
9. In case of weight discrepancy when replacing old lamps, please ensure that the mounted structure is rated to withstand the weight of the new lamp and installation materials.
10. Declared lumen output is based on the measurements obtained during operation on the appointed LED electronic driver under standardized laboratory conditions.
11. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
12. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

1. اقرأ دليل التشغيل بالكامل بعناية قبل التركيب والتشغيل.
2. فترة الضمان مذكورة على المنتج وعلى العبوة. يمكن استبدال المنتج إذا تعطل أو أصبح معيَّباً أثناء الاستخدام العادي ضمن فترة الضمان المحددة.
3. يجب أن يتم التركيب بواسطة كهربائي مرخص ومؤهل.
4. لا تقم بتغيير أو العبث بأي من الدوائر الكهربائية الداخلية أو الأسلاك أو الموصلات أو الكابلات لأي سبب من الأسباب.
5. لا تدخل أجساماً غريبة داخل المنتج، فقد يؤدي ذلك إلى صدمة كهربائية أو عطل أو تلف في المنتج.
6. أثناء التشغيل، قد تصل درجة حرارة وحدة الإضاءة إلى 60 درجة مئوية.
7. يُسمح بإعادة التشغيل الفوري.
8. لا يشمل الضمان أي تعديلات على المنتج أو التركيب غير الصحيح أو الاستخدام خارج النطاق المقصود.
9. في حال وجود اختلاف في الوزن عند استبدال المصابيح القديمة، يُرجى التأكد من أن الهيكل المثبت يتحمل وزن المصباح والمواد الجديدة.
10. يُستند ناتج اللومن المعلن إلى القياسات التي تم الحصول عليها أثناء التشغيل باستخدام سائق LED الإلكتروني المعتمد في ظروف مختبرية قياسية.
11. الكابل أو السلك المرن الخارجي لهذا المصباح غير قابل للاستبدال؛ إذا تلف الكابل، فيجب التخلص من المصباح بالكامل.
12. مصدر الإضاءة في هذا المصباح غير قابل للاستبدال؛ وعند انتهاء عمر مصدر الإضاءة يجب استبدال وحدة الإضاءة كاملة.

INSTALLATION DIAGRAM


دليل التركيب

1

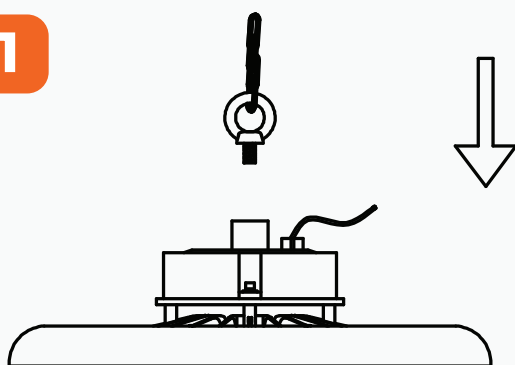


Prepare the hanging hook/ring
تجهيز حلقة/خطاف التعليق

2

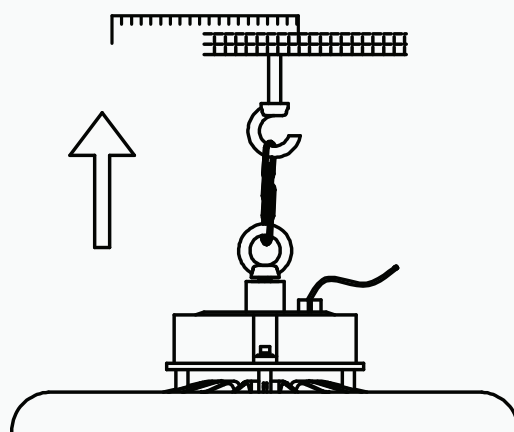


Mount the luminaire to the ceiling
تثبيت المصباح في نقطة السقف

3

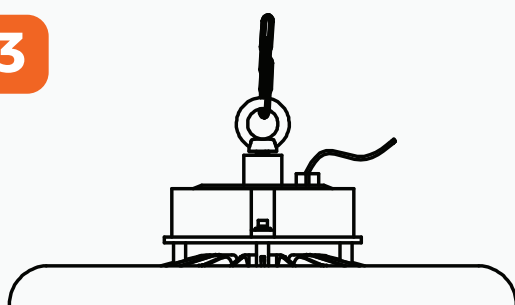



Check and secure the installation
تأكيد التثبيت والموضع

4

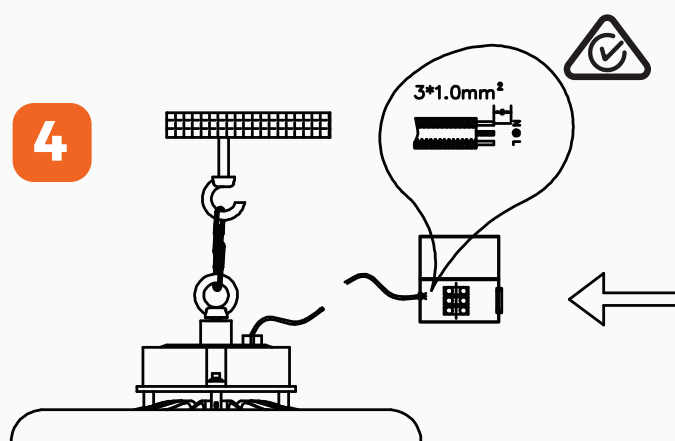

Electrical connection
التوصيل الكهربائي النهائي

Luminous Intensity Distribution Curve

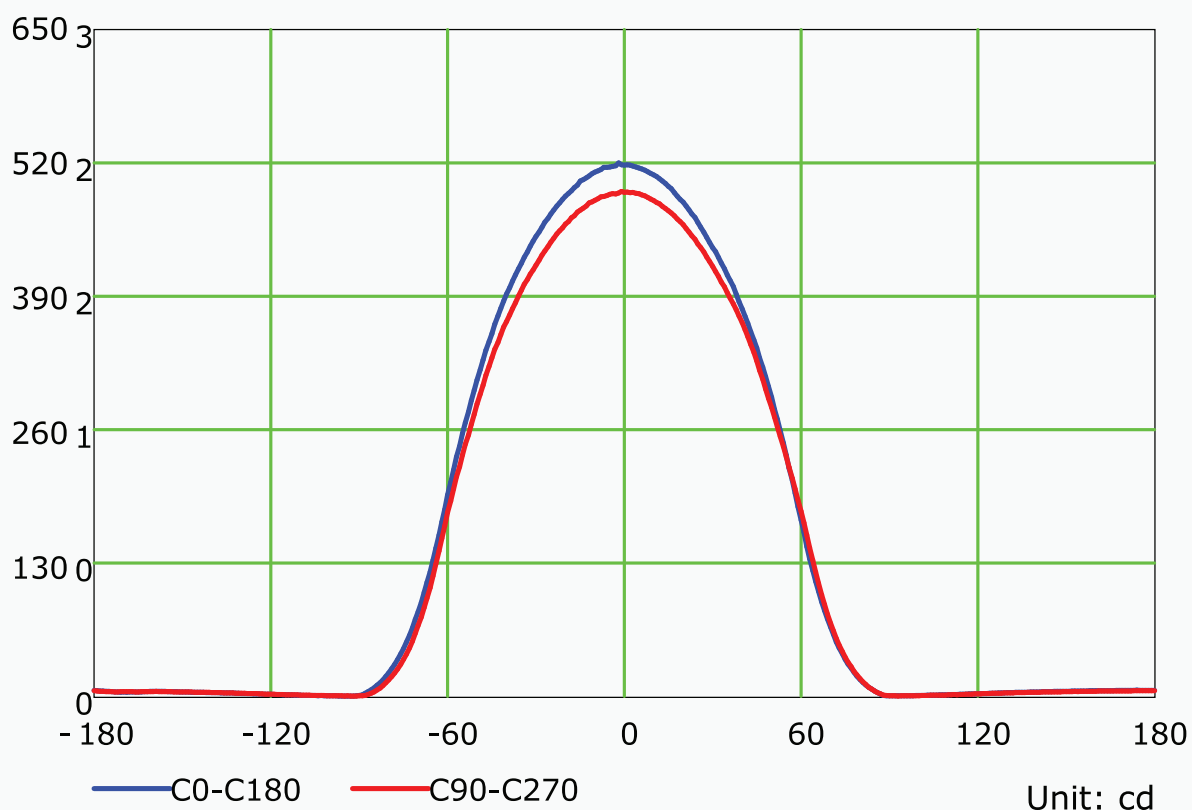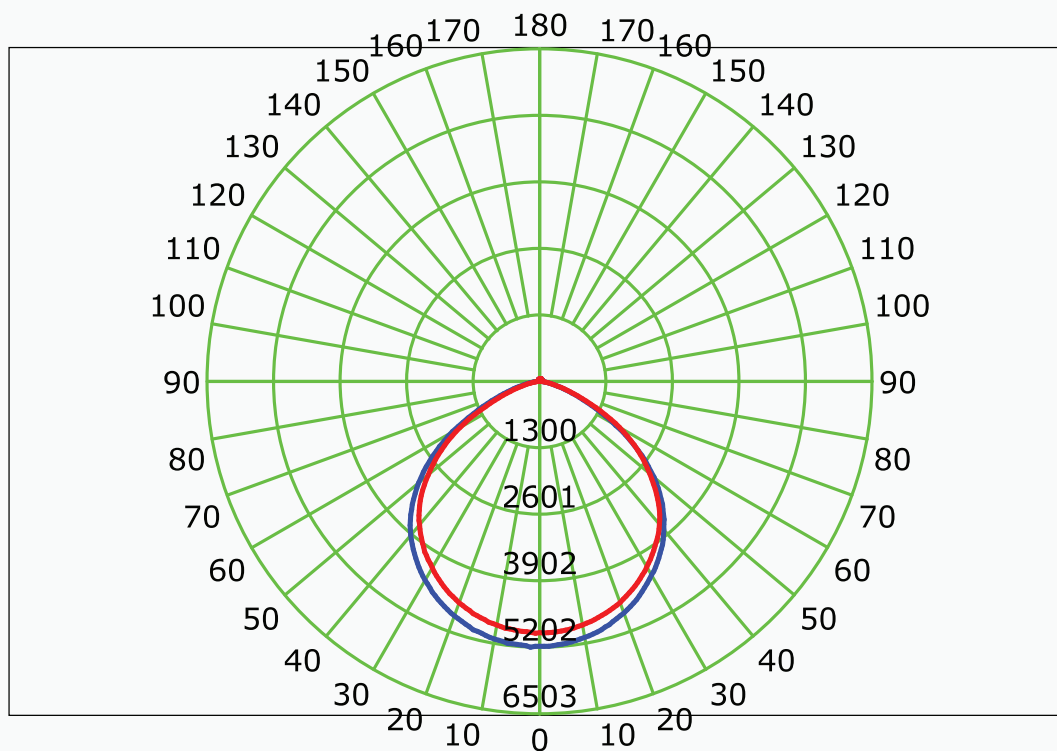



Tel: 8001188889
Wep: lightingaddress.com
Email: support@lightingaddress.co

